

Distributed by  
**Raymarine**

Any reference to Raytheon or RTN in this manual should be interpreted as Raymarine. The names Raytheon and RTN are owned by the Raytheon Company.

# **ST40 Bidata Instrument Owner's Handbook**

Document number: 81159\_2  
Date: 1st May 2001



# Important information

## **WARNING**

**Although your ST40 instrument is designed to give accurate and reliable performance, it should serve only as an aid to navigation and should never lead to the erosion of good seamanship. Always maintain a permanent watch and be aware of situations as they develop.**

## **EMC conformance**

All Raymarine equipment and accessories are designed to the best industry standards for use in the leisure marine environment.

The design and manufacture of Raymarine equipment and accessories conform to the appropriate Electromagnetic Compatibility (EMC) standards, but correct installation is required to ensure that performance is not compromised.

## **Handbook information**

To the best of our knowledge, the information in this handbook was correct when it went to press. However, the Raymarine policy of continuous product improvement may change product specifications without notice. Consequently, unavoidable differences may occur between the product and the handbook from time to time, for which Raymarine cannot accept liability.



# Contents


- Important information ..... i**
  - WARNING ..... i
  - EMC conformance ..... i
  - Handbook information ..... i
  
- Preface ..... v**
  - Parts supplied ..... vi
  
- Chapter 1: Operation ..... 1**
  - 1.1 Introduction ..... 1
    - Display ..... 1
  - 1.2 Operating procedures ..... 2
    - Display action ..... 2
    - Silencing alarms ..... 2
  - 1.3 Alarms ..... 7
    - Alarm indications ..... 7
      - Shallow alarm ..... 7
      - Deep alarm ..... 7
      - Anchor alarms ..... 7
    - Enabling/disabling alarms ..... 8
  
- Chapter 2: Maintenance and Fault Finding ..... 9**
  - 2.1 Maintenance ..... 9
    - Servicing and safety ..... 9
    - Instrument ..... 9
    - Transducer ..... 10
    - Cabling ..... 10
  - 2.2 Fault finding ..... 10
    - Preliminary procedures ..... 10
    - Fixing faults ..... 10
    - Assistance ..... 13

<b>Chapter 3: Installation .....</b>	<b>15</b>
3.1 Planning your installation .....	15
EMC installation guidelines .....	15
Suppression Ferrites .....	16
Connections to Other Equipment .....	16
Tools required .....	16
Site requirements .....	17
Transducers .....	17
Instrument .....	19
3.2 Procedures .....	20
Fitting transducers .....	20
Running transducer cable .....	20
Connections to the instrument .....	21
Stand-alone connections .....	22
SeaTalk connections .....	23
Fitting the instrument .....	23
Desktop Mounting Bracket .....	25
3.3 Calibration requirement .....	26
<b>Chapter 4: Calibration .....</b>	<b>27</b>
4.1 Introduction .....	27
EMC conformance .....	27
4.2 User calibration .....	27
Depth offsets .....	31
4.3 Intermediate calibration .....	31
4.4 Dealer calibration .....	32
<b>Instrument Specification .....</b>	<b>35</b>
<b>Glossary .....</b>	<b>37</b>
<b>Index .....</b>	<b>39</b>


# Preface

Thank you for purchasing a Raymarine product. We are sure your ST40 instrument will give you many years of trouble-free operation.


This instrument is designed to provide reliable performance, even under the most demanding conditions.

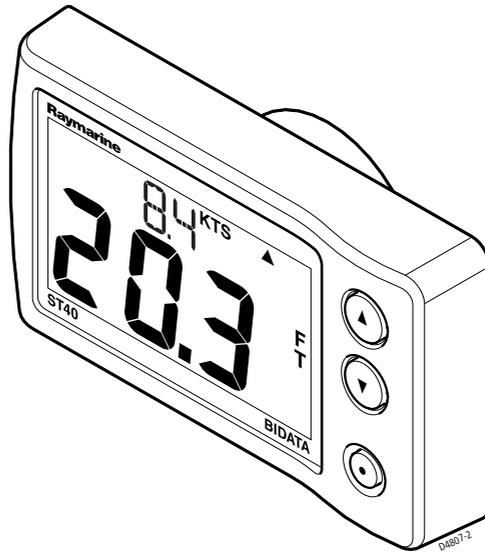


# Parts supplied

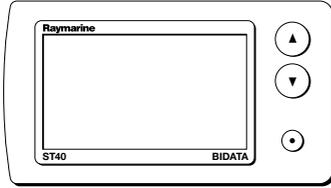


ST40 Bidata instrument

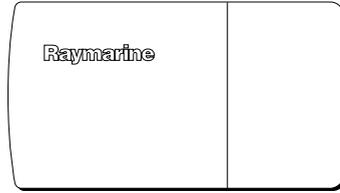


Instrument Cover

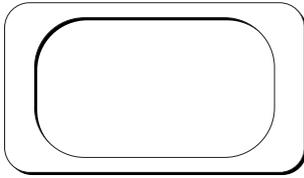

Gasket

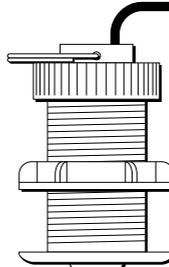

Retractable speed transducer  
Supplied with bung  
(not illustrated)

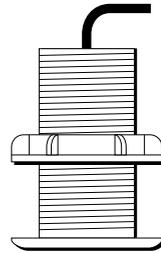


Depth transducer




Clamping bracket



 
1 m (3 ft) power cable




Fixing stud  
Thumb nut

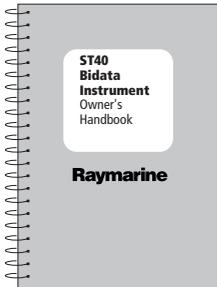

Owner's Handbook.  
Warranty document and fitting  
templates included in Handbook

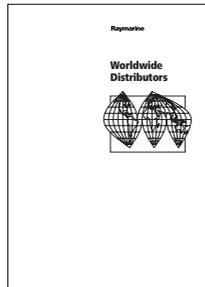

Worldwide Service Centre  
Handbook.

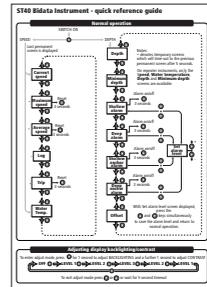

Quick Reference Guide

**Note:**

The items shown here are supplied for an ST40 Bidata system. If an instrument is purchased separately, transducers are not included. If any item is not present, contact your Raymarine Dealer.

# Chapter 1: Operation

## 1.1 Introduction

Your ST40 Bidata instrument:

- Provides speed information (current, maximum and average), in either knots (KTS), miles per hour (MPH) or kilometres per hour (KPH).
- Provides log and trip information. These are given in either nautical miles (NM), statute miles (M) or kilometres (KM).
- Provides water temperature information. This is given in either degrees Celsius (°C) or degrees Fahrenheit (°F).
- Provides depth information in either feet (FT), metres (M) or fathoms (FA).
- Records the minimum depth encountered during the period it is switched on. You can reset this at any time.
- Enables you to define alarm thresholds for shallow water, deep water, shallow anchor and deep anchor.
- Enables you to see what offset is applied to the depth reading.

**Note:** *The required speed, distance, depth and water temperature units are selected during User calibration (see Chapter 4, Calibration).*


### **CAUTION**

**Your instrument is calibrated to factory (default) settings when first supplied and must therefore be calibrated before use, to ensure optimum performance on your vessel. Do NOT use the instrument until the calibration procedures have been satisfactorily completed, using the procedures in *Chapter 4, Calibration*.**

Coloured bezel and Desktop Mounting Bracket options are available for your ST40 instrument. Contact your Raymarine dealer for further information.

## **Display**

The ST40 Bidata display comprises upper and lower data areas, each of which shows either depth or speed information, selected as shown in the following illustration.

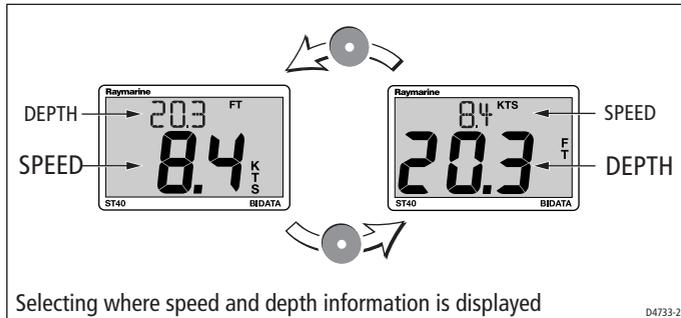

## 1.2 Operating procedures

Operating information is presented in flow chart form. The flow charts show the various operating screens and key presses necessary to carry out the various instrument functions. Key presses are momentary unless otherwise stated. Note that:


- Up/down depth-trend arrows are displayed, if the seabed is rising or falling at a significant rate.
- The minimum depth reading is reset to zero at power up.
- The maximum speed reading is reset to zero at power up.
- The average speed reading is reset to zero at power up.
- The Log screen shows the total distance covered by the vessel since the ST40 Bidata instrument was fitted.
- The trip reading is reset to zero at power up.

### Display action




During normal operation (see *Normal operation* flow charts), the **Speed**, **Depth** and **Water temperature** screens are permanent screens, i.e. once one of these is selected, it will remain until another screen is manually selected. All other screens are temporary and after 5 seconds, will time out to the permanent screen which was last displayed for 5 seconds or more.

### Silencing alarms

To silence an alarm (see the *Alarms* section, later in this chapter), momentarily press any one of the instrument keys.

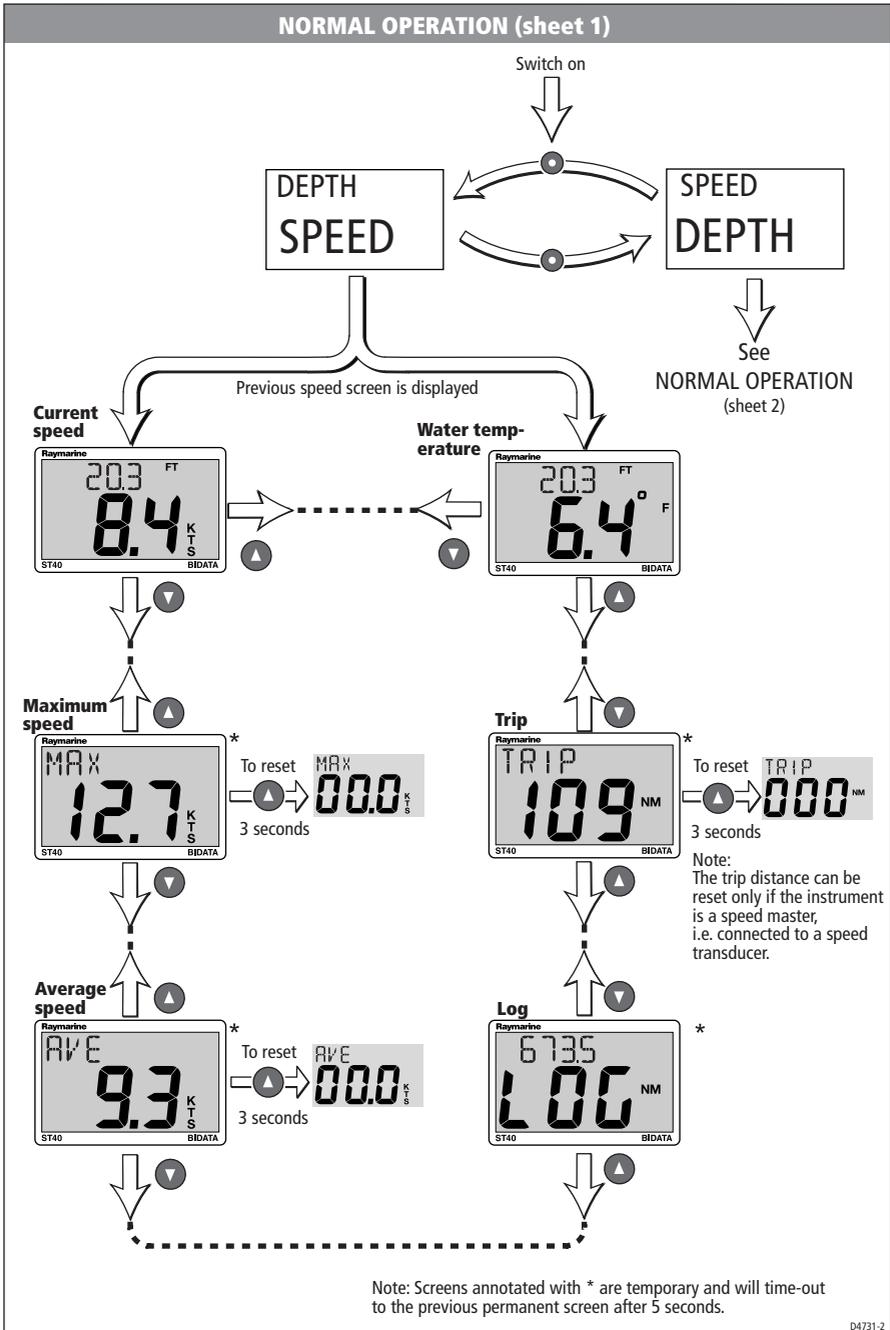

**NORMAL OPERATION (sheet 2)**

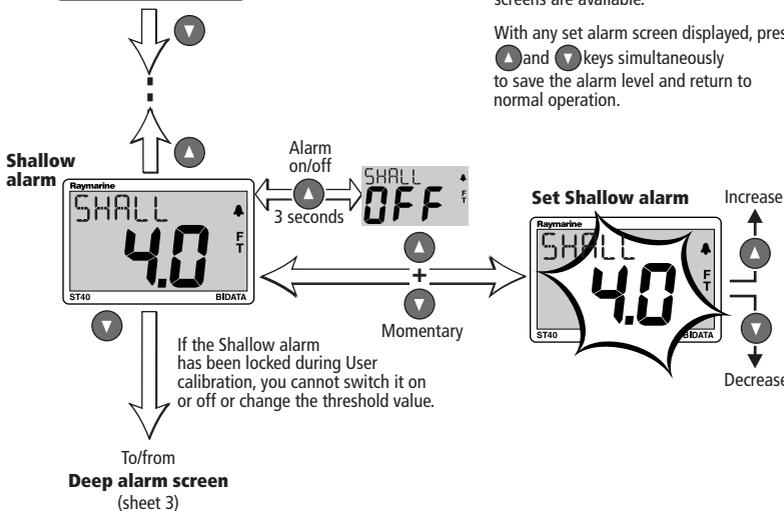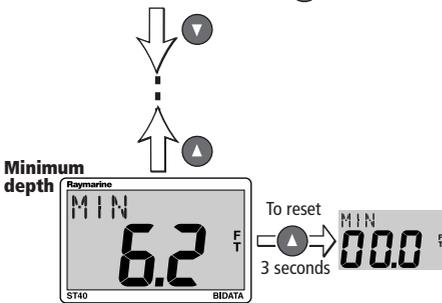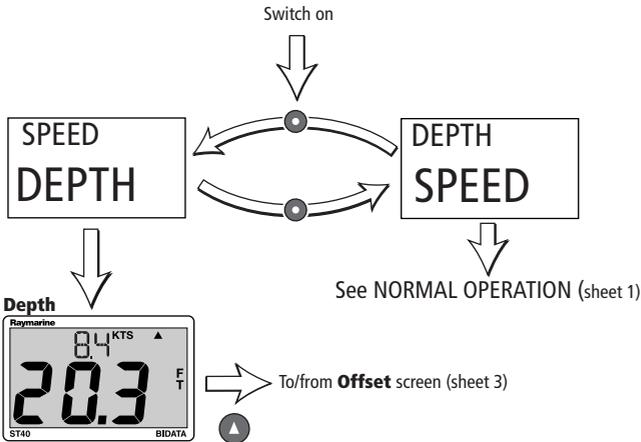


Notes:  
Note: Screens other than the **Depth** screen, are temporary and will time-out to the previous permanent screen after 5 seconds.

This diagram shows the operating sequence for an ST40 Bidata master instrument. On a repeater instrument, only the **Depth, Minimum depth, Speed and Water temperature** screens are available.



With any set alarm screen displayed, press the ▲ and ▼ keys simultaneously to save the alarm level and return to normal operation.

**NORMAL OPERATION (sheet 3)**

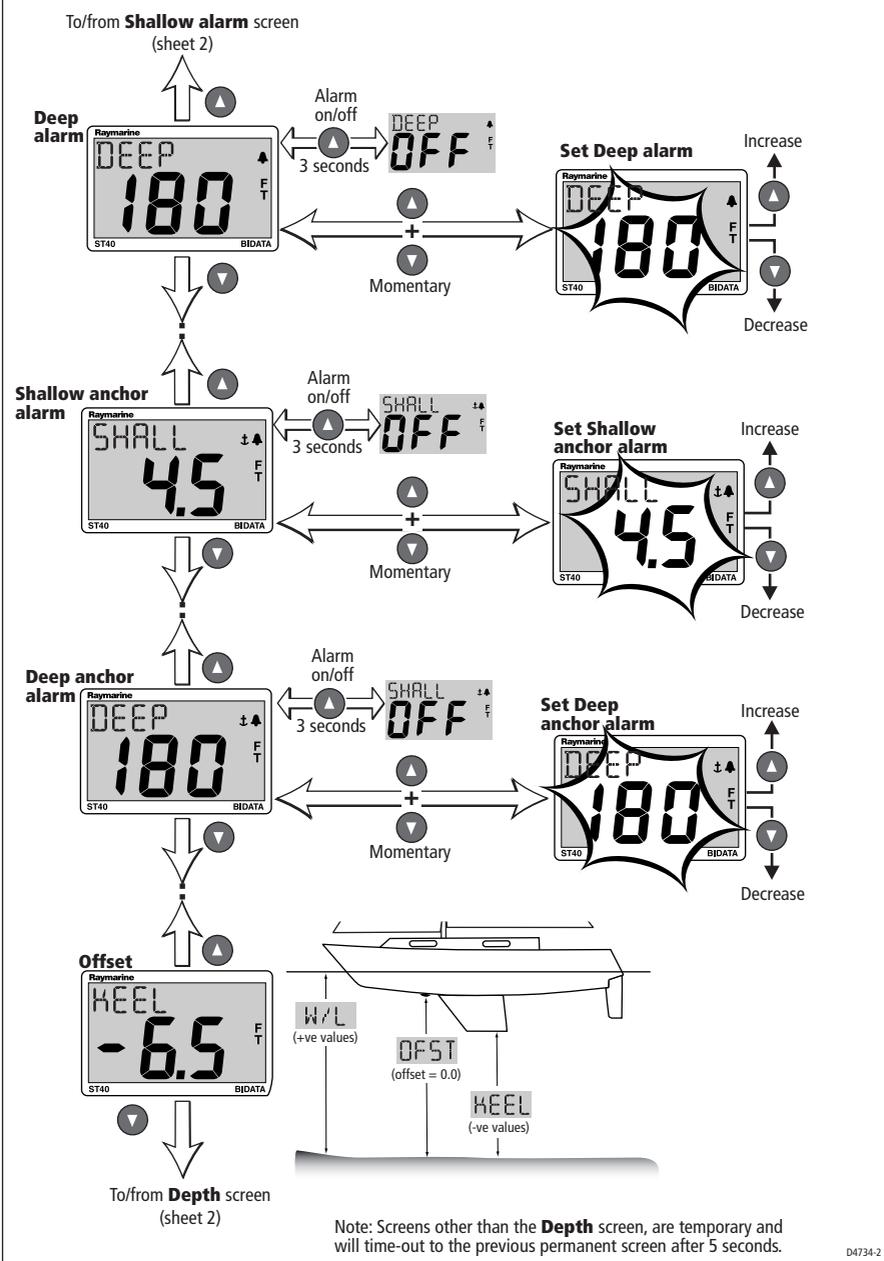

## Adjusting display backlighting and contrast

Hold down  for 1 second to enter Adjust Backlight mode  
for 2 seconds to move through Adjust Backlight mode and enter Adjust Contrast mode

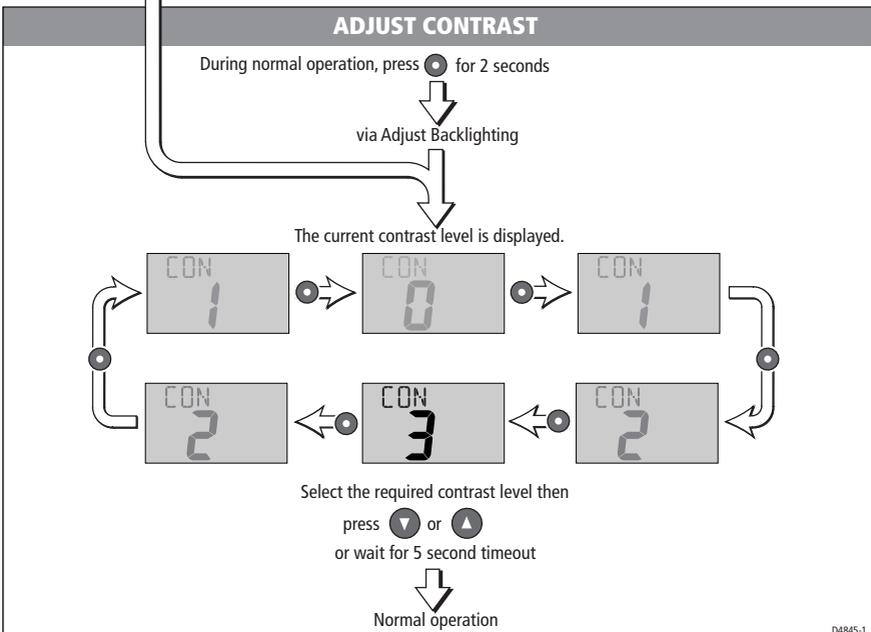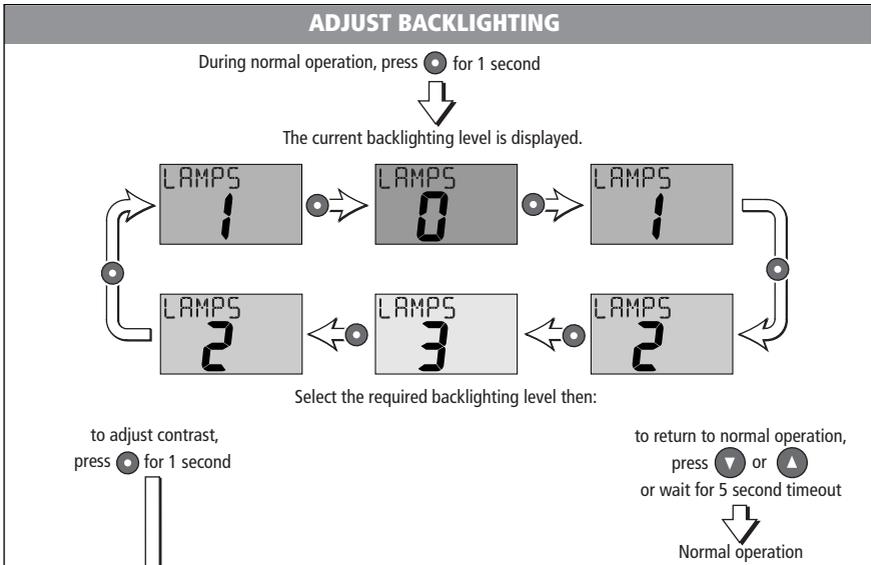

# 1.3 Alarms

## Alarm indications

### Shallow alarm




The image shows a rectangular display panel with a white background. At the top left, it says 'Raymarine'. The main display area shows the word 'SHALL' in a jagged, comic-book style font. Below it, the number '3.5' is displayed in a large, bold, digital font. To the right of the number, the letters 'F' and 'T' are stacked vertically. In the top right corner of the display, there is a small bell icon with a checkmark. The bottom left corner of the panel is labeled 'ST40' and the bottom right corner is labeled 'BIDATA'. To the right of the display panel is a plus sign followed by a speaker icon with sound waves.

Depth is equal to or less than the shallow alarm threshold.  
Alarm continues until cancelled manually.

D4666-2

### Deep alarm

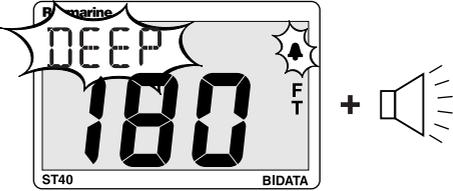


The image shows a rectangular display panel with a white background. At the top left, it says 'Raymarine'. The main display area shows the word 'DEEP' in a jagged, comic-book style font. Below it, the number '180' is displayed in a large, bold, digital font. To the right of the number, the letters 'F' and 'T' are stacked vertically. In the top right corner of the display, there is a small bell icon with a checkmark. The bottom left corner of the panel is labeled 'ST40' and the bottom right corner is labeled 'BIDATA'. To the right of the display panel is a plus sign followed by a speaker icon with sound waves.

Triggered by depths equal to the deep alarm threshold. Continues until cancelled manually.

D4789-2

### Anchor alarms

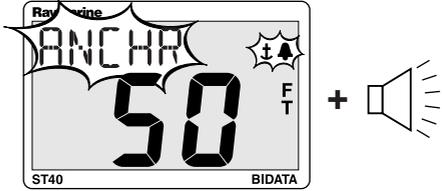

The image shows a rectangular display panel with a white background. At the top left, it says 'Raymarine'. The main display area shows the word 'ANCHR' in a jagged, comic-book style font. Below it, the number '50' is displayed in a large, bold, digital font. To the right of the number, the letters 'F' and 'T' are stacked vertically. In the top right corner of the display, there is a small bell icon with a checkmark. The bottom left corner of the panel is labeled 'ST40' and the bottom right corner is labeled 'BIDATA'. To the right of the display panel is a plus sign followed by a speaker icon with sound waves.

Depth is either:  
equal to or less than the shallow anchor alarm threshold  
or  
equal to or more than the deep anchor alarm threshold

D4790-2

## Enabling/disabling alarms

You can enable or disable any alarm function (i.e. switch it on or off) by selecting the relevant alarm screen (see *Normal operation*) and holding down the  key for 3 seconds (toggle action).

# Chapter 2: Maintenance and Fault Finding

## 2.1 Maintenance

### Servicing and safety

- Raymarine equipment should be serviced only by authorised Raymarine service technicians. They will ensure that service procedures and replacement parts used will not affect performance. There are no user-serviceable parts in any Raymarine product.
- Some products generate high voltages, so never handle the cables/connectors when power is being supplied to the equipment.
- When powered up, all electrical equipment produces electromagnetic fields. These can cause adjacent pieces of electrical equipment to interact with one another, with a consequent adverse affect on operation. In order to minimise these effects and enable you to get the best possible performance from your Raymarine equipment, guidelines are given in the installation instructions, to enable you to ensure minimum interaction between different items of equipment, i.e. ensure optimum Electromagnetic Compatibility (EMC).
- Always report any EMC-related problem to your nearest Raymarine dealer. We will use any such information to improve our quality standards.
- In some installations, it may not be possible to prevent the equipment from being affected by external influences. In general this will not damage the equipment but it can lead to spurious resetting action, or momentarily may result in faulty operation.
- Always switch off the power to Raymarine equipment before working on it.

When requesting service, please quote equipment Type, Model Number, Serial Number and, if possible, Software Release Issue. The Software Release Issue can be ascertained by means of the Intermediate Calibration facility, see *Chapter 4, Calibration*.

### Instrument

Certain atmospheric conditions may cause a small amount of condensation to form on the instrument window. This will not harm the instrument and will clear after the instrument has been switched on for a short period.

Periodically clean your ST40 instrument with a soft damp cloth. Do NOT use chemical or abrasive materials to clean the instrument.

## Transducers

Refer to the Installation and Maintenance instructions supplied with the transducers.

## Cabling

Examine all cables for chafing or other damage to the outer shield and, where necessary, replace and re-secure.

## 2.2 Fault finding

### Preliminary procedures

If you appear to have a problem, first check the security of the connections at the rear of the instrument and reconnect any that are loose.


Changes in the electronic environment may adversely affect the operation of your ST40 equipment. Typical examples of such changes are:

- Electrical equipment has recently been installed or moved aboard your vessel.
- You are in the vicinity of another vessel or shore station emitting radio signals.

### Fixing faults

All Raymarine products are subjected to comprehensive test and quality assurance programmes prior to packing and shipping. However, if a fault occurs, the following guidelines may help to identify and rectify the problem.


#### Low battery

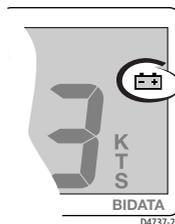

#### Action

Recharge your vessel's battery as soon as possible

### Display blank

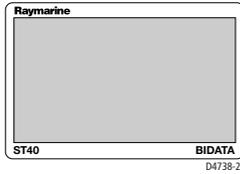


### Action

Check fuse/circuit breaker.


Check power supply.

Check SeaTalk cabling and connector security.

### Depth reading flashes when under way

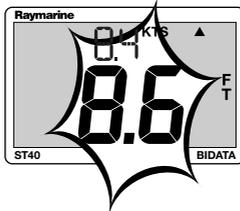


OR

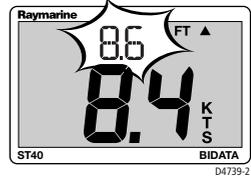


### Action

Ensure that reading stabilises when clear of disturbed water, e.g. boat wakes, propeller wash etc.

### No depth information


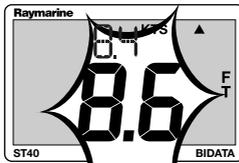


OR

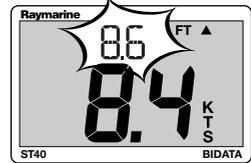

1 minute

1 minute

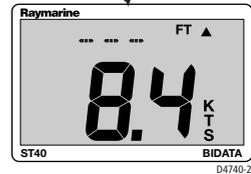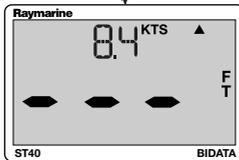


### Action


Check the condition of the depth transducer cable and the security of the connections.

Could also be due to weed growing on the transducer face.

## No speed or temperature information


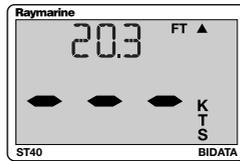


OR

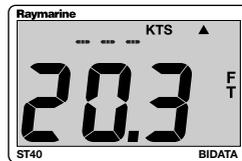

and

and

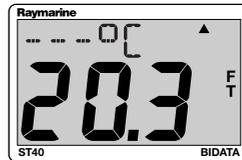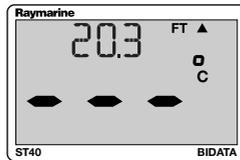


D4741-3


### Action

Check the condition of the speed transducer cable and the security of the connections.

## No speed information but temperature information is present


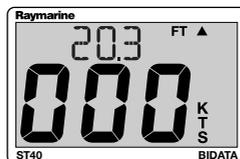


OR

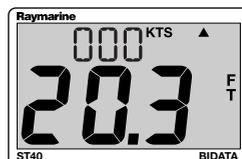

and

and

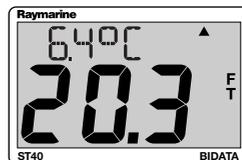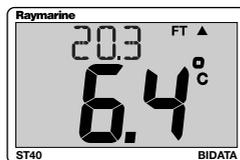

D4742-2

### Action

#### CAUTION

If you need to remove the transducer insert, have the transducer bung to hand and secure it in the transducer body immediately after the insert has been removed, to prevent excessive ingress of water.

The speed transducer paddle wheel may be fouled. Clean the paddle wheel.


**SeaTalk information not being transferred between instruments**

For example, backlighting level changes implemented at one instrument do not affect other instruments

**Action**

- Check security of SeaTalk connections between instruments.
- Check condition of SeaTalk cables.
- Isolate faulty instrument by disconnecting instruments one by one.

**A group of SeaTalk instruments not working**

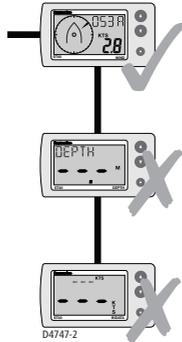

**Action**

- Check the security of SeaTalk connectors between functioning and non-functioning instruments.

**Assistance**

If you are unable to rectify any problem, please contact your local Raymarine Dealer for assistance.



# Chapter 3: Installation

This chapter describes how to install the ST40 Bidata instrument, and associated transducers. The transducers are fitted in the hull of the vessel and is connected to the rear of the instrument.

## 3.1 Planning your installation

Determine the best positions for both transducer and instrument, such that the *EMC installation guidelines* and the *Site requirements* (below) are satisfied.

### EMC installation guidelines

All Raymarine equipment and accessories are designed to the best industry standards for use in the leisure marine environment.

Their design and manufacture conform to the appropriate Electromagnetic Compatibility (EMC) standards, but correct installation is required to ensure that performance is not compromised. Although every effort has been taken to ensure that they will perform under all conditions, it is important to understand what factors could affect the operation of the product.

The guidelines given here describe the conditions for optimum EMC performance, but it is recognised that it may not be possible to meet all of these conditions in all situations. To ensure the best possible conditions for EMC performance within the constraints imposed by any location, always ensure the maximum separation possible between different items of electrical equipment.


For **optimum** EMC performance, it is recommended that **wherever possible**:

- All Raymarine equipment and cables connected to it are:
  - At least 1 m (3 feet) from any equipment transmitting or cables carrying radio signals e.g. VHF radios, cables and antennas. In the case of SSB radios, the distance should be increased to 2 m (7 ft).
  - More than 2 m (7 ft) from the path of a radar beam. A radar beam can normally be assumed to spread 20 degrees above and below the radiating element.

- The equipment is supplied from a different battery from that used for engine start. Voltage drops below 10 V in the power supply to our products, and starter motor transients, can cause the equipment to reset. This will not damage the equipment, but may cause the loss of some information and may change the operating mode.
- Raymarine specified cables are used at all times. Cutting and rejoining these cables can compromise EMC performance and so must be avoided unless doing so is detailed in the installation manual.
- If a suppression ferrite is attached to a cable, this ferrite should not be removed. If the ferrite needs to be removed during installation it must be reassembled in the same position.

### Suppression Ferrites

The following illustration shows typical cable suppression ferrites fitted to Raymarine equipment. Always use the ferrites supplied by Raymarine.

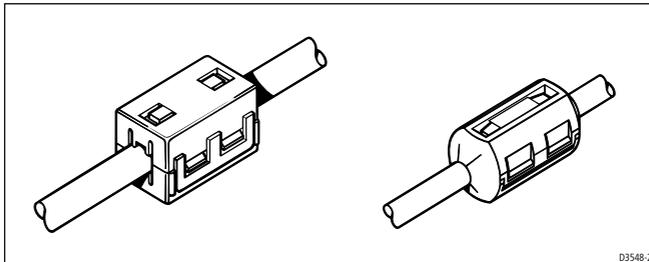


### Connections to Other Equipment

If your Raymarine equipment is going to be connected to other equipment using a cable not supplied by Raymarine, a suppression ferrite **MUST** always be fitted to the cable close to the Raymarine unit.

### Tools required

The tools required for fitting the standard ST40 instrument system are shown in the following illustration.

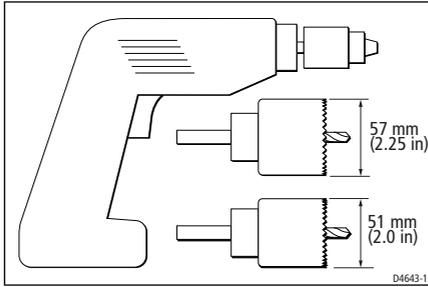


**Note:** *If you intend fitting a nonstandard transducer, extra tools may be required*

## Site requirements

### Transducers

The transducer types required for the various hull types are as follows:


Hull material	Speed transducer	Depth transducer
GRP Steel Aluminium	M78712 Through hull plastic (supplied as standard)	M78713 through hull plastic (supplied as standard) or M78718 Retractable through hull
Wood	M78716 Through hull bronze	M78714 Through hull bronze

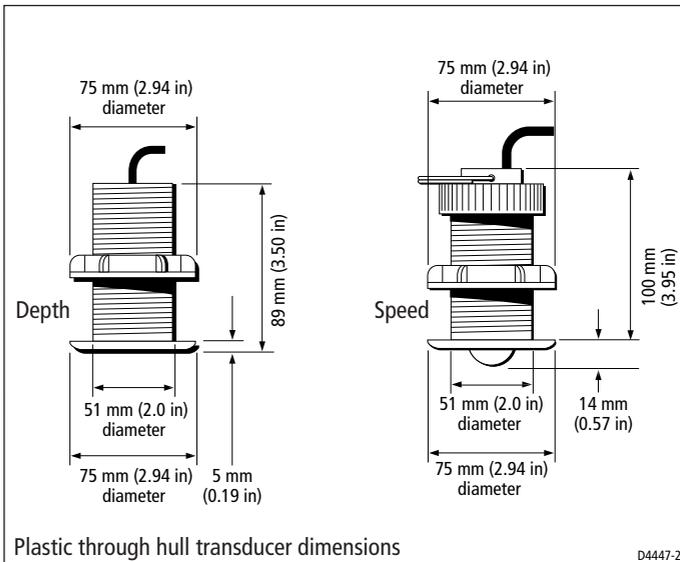

D4447-2

Other transducer types are available for specific requirements. For further details, contact your local Raymarine dealer.


The transducers should be sited within the clear water flow areas indicated by the shaded areas below.

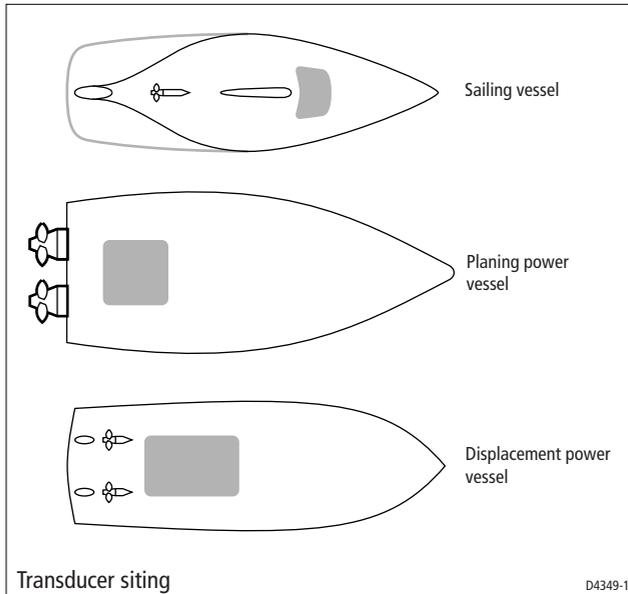


Each transducer should also:

- Be ahead of the propellers (by a minimum of 10% of the water line length).
- Be at least 150 mm (6 in) away from the keel (ideally ahead of the keel if a sailing yacht).
- Be as near as possible to the centre line of the vessel.
- Be clear of other through-hull fittings or projections.
- Have sufficient clearance inside the hull to fit the nut.
- Have 100 mm (4 in) of headroom to allow for withdrawal.

In addition to the above requirements, the depth transducer must be mounted within 10° of the vertical, forward, aft and athwart ships.

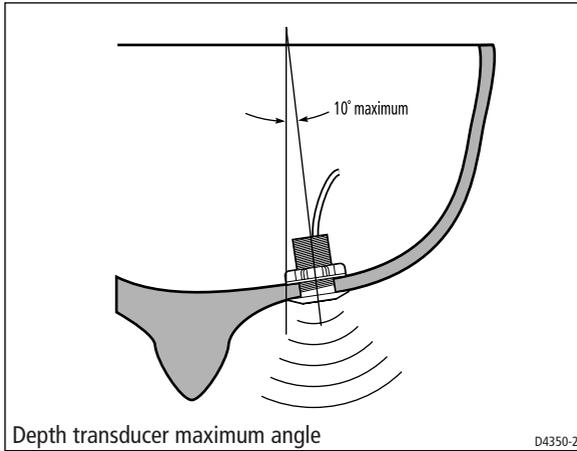

### Instrument

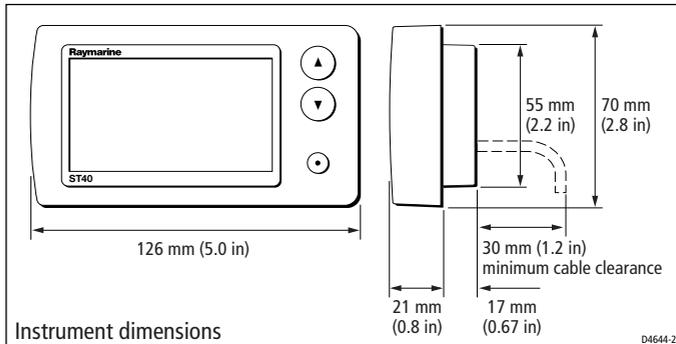

### CAUTION:

The presence of moisture at the rear of the instrument could cause damage either by entering the instrument through the breathing hole or by coming into contact with the electrical connectors.

Each instrument must be positioned where:

- It is easily read by the helmsman or navigator
- It is protected against physical damage
- It is at least 230 mm (9 in) from a compass
- There is reasonable rear access for installation and servicing
- The rear of the instrument is protected from water.

## 3.2 Procedures

Adapt these procedures as appropriate, to suit your individual requirement.

### **CAUTION:**

**Where it is necessary to cut holes (e.g. for cable routing and instrument mounting), ensure that these will not cause a hazard by weakening critical parts of the vessel's structure. If in doubt, seek the advice of a reputable boat builder.**

### **Fitting transducers**

Instructions for installing and maintaining the speed and depth transducers are packed with them. Before attempting to install the transducers, read these instructions and the *Site requirements* for transducers described in this Chapter.

### **Running transducer cable**

Each transducer type has a 9 m (30 ft) cable fitted with spade terminals for connection to the ST40 Bidata instrument. Observing the following guidelines, run the cable to the instrument:

- If the cable has to be fed through the deck, always use a good quality deck gland.
- Where cables are fed through holes, always use grommets to prevent chafing.
- Secure long cable runs so they do not present a hazard.
- Wherever possible, route the cable away from fluorescent lights, engines, radio transmitting equipment, as these may cause interference.

**Important point:** Do NOT shorten the cable from the depth transducer as this will seriously degrade transducer performance.


## Connections to the instrument

You can connect your instrument:

- Directly to the speed and depth transducers as a stand-alone master instrument. When connected in this manner, the instrument must be connected to a suitable power source using the 1 m (3 ft) power cable provided.
- As part of a SeaTalk system either as a repeater or, with a transducer also connected as a system master. To connect to SeaTalk, you will need an additional SeaTalk Interconnection Kit (Part No. E25028). When connected in this manner, power can be provided from the SeaTalk bus (e.g. from the autopilot).

You can also connect the instrument to the speed and depth transducers and to SeaTalk. When thus connected, the instrument will be the master speed and depth instrument for the SeaTalk system.


If it is necessary to fit spade connectors to the transducer cable, do so as shown in the following illustration. Prepare the cable, as at (a), and fit the spade connectors, as at (b). When fitting each spade connector, ensure that wire strands do not extend beyond the rear of the spade connector insulation.

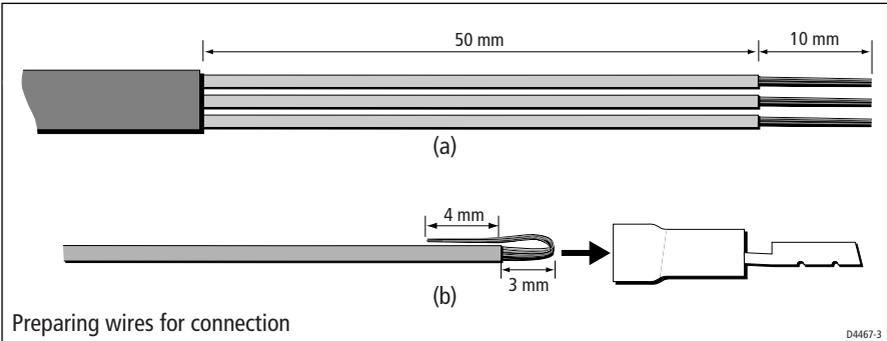




## Stand-alone connections



### CAUTION

Ensure that the power supply for each stand-alone ST40 instrument is protected by a 3 A fuse or circuit breaker.

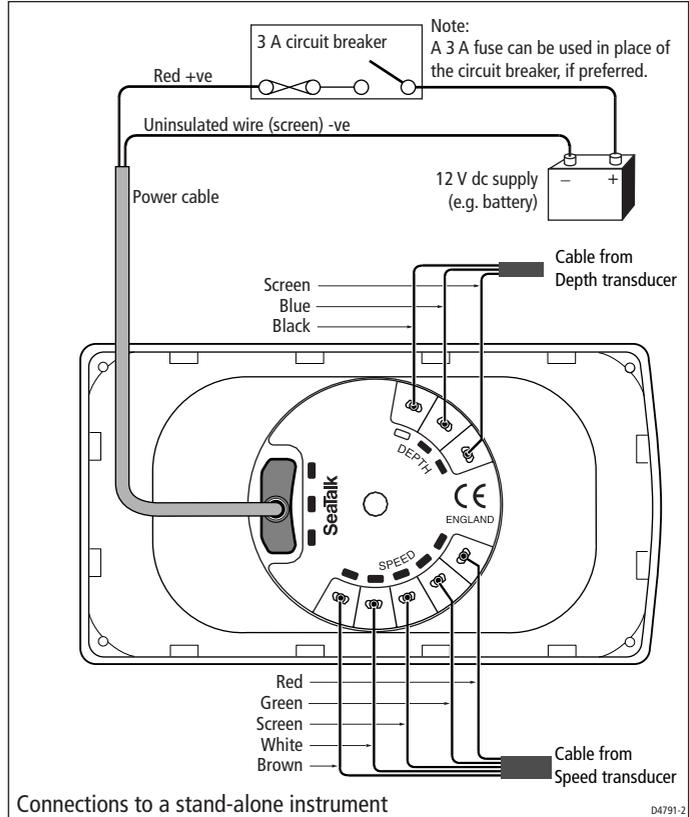




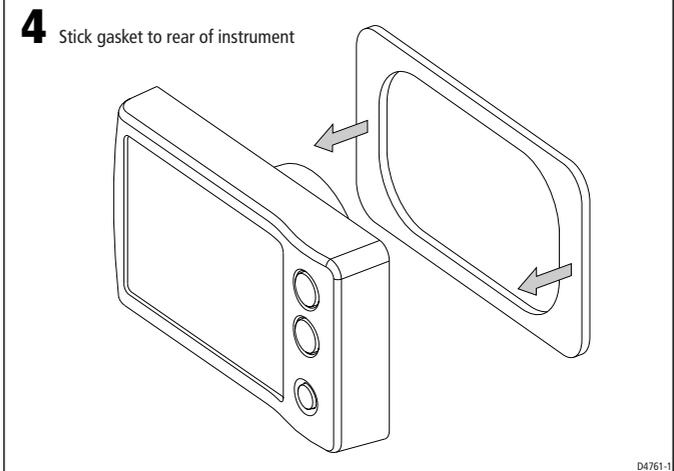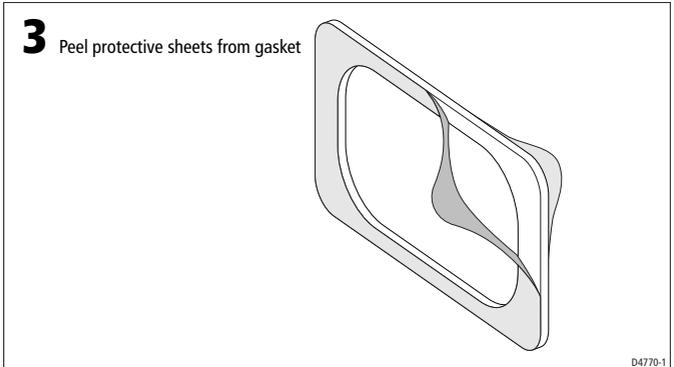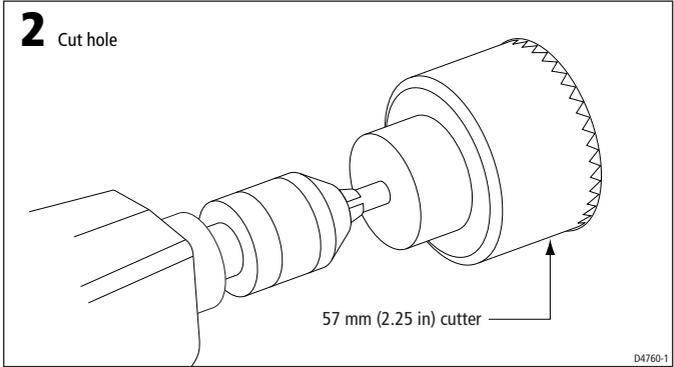

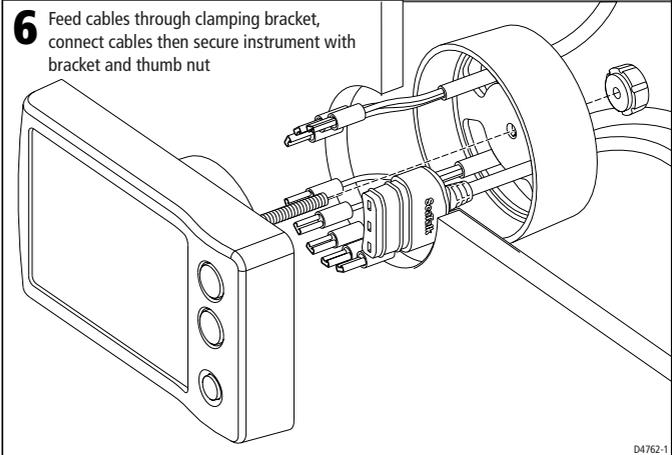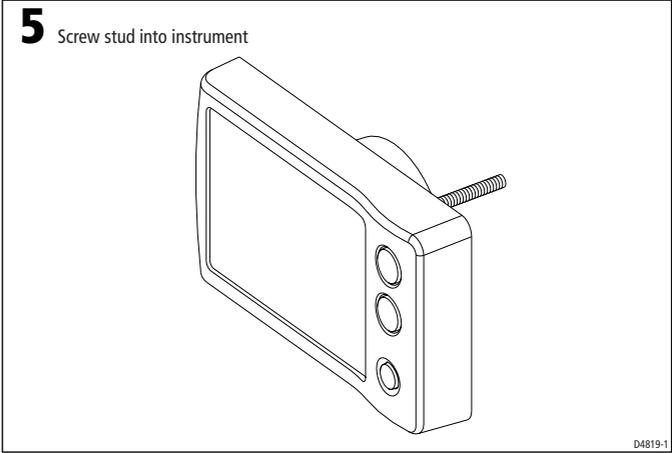

### Desktop Mounting Bracket

An optional Desktop Mounting Bracket (Part No. E25024) enables you to mount your ST40 instrument in locations where other forms of mounting are impractical.

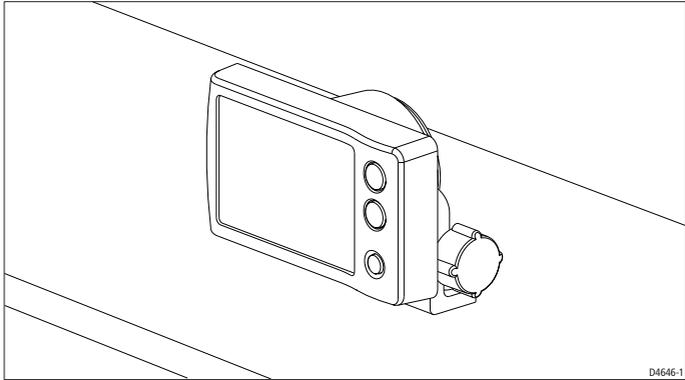

To bracket mount your ST40 instrument, do so in accordance with the *Instruction Sheet*, which is included with the Desktop Mounting Bracket.

### 3.3 Calibration requirement

Once installation is complete and before you use your instrument, carry out the calibration procedures detailed in *Chapter 4, Calibration*.

# Chapter 4: Calibration

## 4.1 Introduction

The procedures in this Chapter must be carried out before the equipment is used operationally, to optimise the performance of the instrument with the vessel.

Calibration information is presented in flow chart form. The flow charts show the various calibration screens and key presses necessary to carry out calibration. All key presses are momentary unless otherwise stated.

### EMC conformance

- Always check the installation before going to sea to make sure that it is not affected by radio transmissions, engine starting etc.

## 4.2 User calibration

User calibration enables you to:

- Set the required units for speed readings. Either KTS (knots), MPH (miles per hour) or KPH (kilometres per hour).
- Select temperature units. Either °C or °F, as required.
- Set the speed display response. Use higher response values when boating in conditions requiring rapid updates of the current speed (e.g. competition sailing or on power boats). Use slower response values when you require an average speed over a longer period of time (e.g. when cruising, especially in heavy seas).
- Set the correct speed reading, either by using a **Cal factor** screen to adjust the calibration factor, or by applying Speed Over Ground (SOG) as the current speed. Your vessel must be moving at 0.5 KTS or more and be receiving SeaTalk SOG data, to enable SOG to be applied as the current speed. This should be done only in conditions of zero tide and current.
- Set the depth display response. Use higher response values when boating in conditions requiring rapid updates of depth information (e.g. inshore, especially when travelling at high speed). Use slower response values when you require an average depth over a longer period of time (e.g. deep sea cruising).
- Set the required units for depth readings. Either FT (feet), M (metres) or FA (fathoms).


- Set the required depth offset.
- Lock the shallow alarm, to prevent unauthorised changes during normal operation.

Power up the instrument then follow the procedure in the *User calibration* flow diagram. This diagram shows the User calibration sequence for an ST40 Bidata operating as a master instrument for both speed and depth .

### USER CALIBRATION (sheet 1)

During normal operation  
hold down  and  for approximately 2 seconds

**Entry screen**

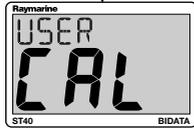

Note:  
If there is no key activity when the **Entry screen** is displayed, calibration will time out to normal operation after 5 seconds,

**Depth response**




↑ 15 (fast)  
↓ 1 (slow)

**Speed response**




↑ 15 (fast)  
↓ 1 (slow)

**Depth units**

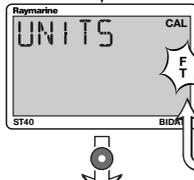

**Speed units**

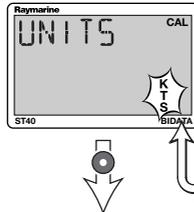

To **Distance units** screen  
(sheet 2)

From **Shallow alarm lock** screen  
(sheet 2)

To save your settings and return to normal operation from any screen, hold down




for approximately 2 seconds


### USER CALIBRATION (sheet 2)

From **Speed units** screen (sheet 1)


**Distance units**

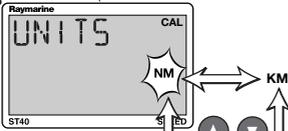

**Temperature units**

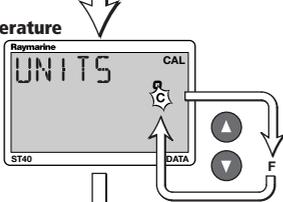

2.5 (increase speed)  
 0.25 (decrease speed)

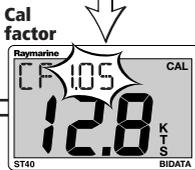


Displayed only if SOG available on SeaTalk & vessel speed greater than 0.5 kt. To apply SOG value as speed reading, press

for 3 seconds

in conditions of zero tide and current


**Depth offset**

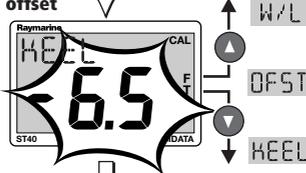

**WARNING:** Correct offset values are essential to ensure the safe operation of the vessel. If you are not sure how to set the correct values, refer to the additional information given in the text accompanying this

To **Depth response** screen (sheet 1)

**Shallow alarm lock**

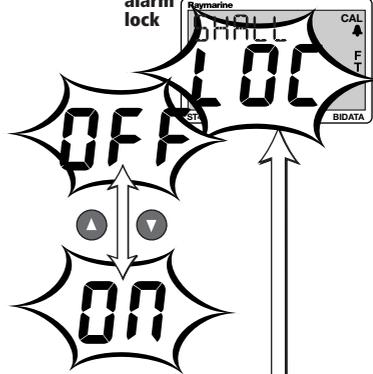

To save your settings and return to normal operation from any screen, hold down and for approximately 2 seconds

## Depth offsets

### **WARNING:**

**The use of incorrect offset values could result in misleading depth information being displayed with a consequent risk of running aground.**

The depth offset screen enables you to determine the exact point on the vessel from which depths are measured. This point can be:


- **The transducer.** Set offset to zero. With zero offset applied, the screen header is OFST.
- **The bottom of the keel.** Set a negative offset equal to the vertical distance between the transducer position and the bottom of the keel. With a negative offset applied, the screen header is KEEL.
- **The water line.** Set a positive offset equal to the vertical distance between the transducer position and the water line. With a positive offset applied, the screen header is W/L.

## 4.3 Intermediate calibration

Intermediate calibration enables you to:

- Check the instrument software version.
- Check and if necessary set, the instrument status - either MASTR (master) or REPTR (repeater), for both speed and depth.

Follow the procedure in the *Intermediate calibration* flow diagram.

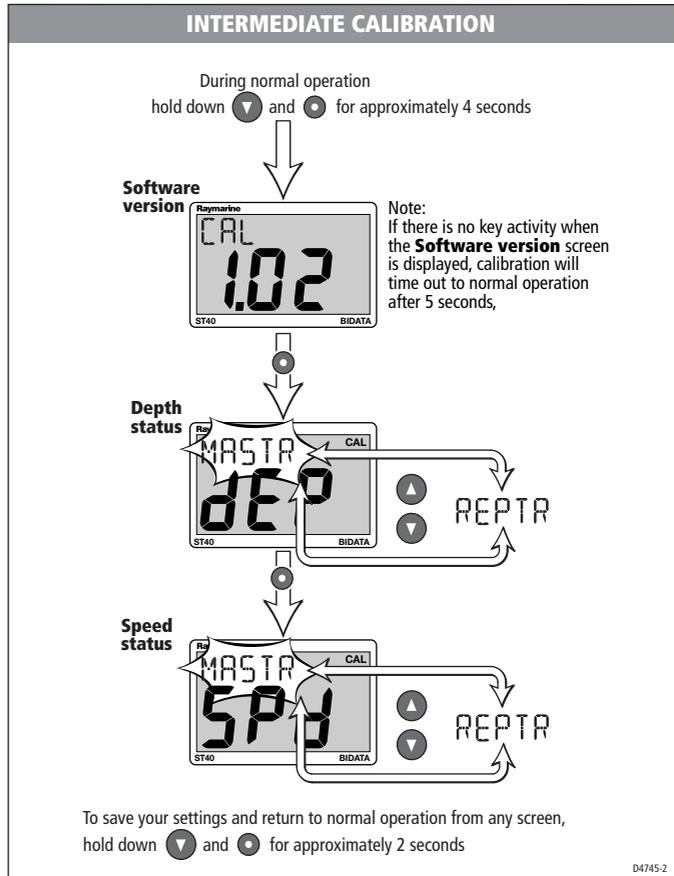

## 4.4 Dealer calibration

Dealer calibration enables you to set:

- User calibration on/off.
- Boat show mode on/off.

Dealer calibration also gives access to the **Factory defaults** screen. This enables you to reapply the factory settings if you want to reset the instrument to a known operating condition.

Follow the procedure in the *Dealer calibration* flow diagram.

### DEALER CALIBRATION

During normal operation  
hold down and for approximately 12 seconds

**Entry screen**



Note:  
If there is no key activity when the **Entry screen** is displayed, calibration will time out to normal operation after 5 seconds,

**Calibration access**




OFF

If **NO**

If **YES**


Return to normal operation with factory defaults set

**Boat show mode**

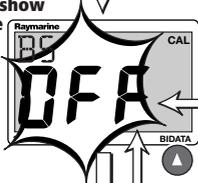

**CAUTION:**  
Do NOT switch the Boat Show mode on. This function must only be used for demonstration purposes.

**Factory defaults**

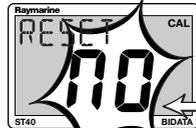

**YES**

To save your settings and return to normal operation from any screen,  
hold down and for approximately 2 seconds



# Instrument Specification

<b>Supply voltage:</b>	10 V to 16 V dc.
<b>Current consumption (12 V supply):</b>	35 mA typical. 70 mA with maximum backlighting.
<b>Operating temperature:</b>	0°C to +70°C.
<b>Interfaces:</b>	SeaTalk.
<b>Overall dimensions:</b>	126 mm x 70 mm x 38 mm (5.00 inches x 2.80 inches x 1.55 inches).
<b>Boss diameter:</b>	55 mm (2.20 inches).
<b>Speed range:</b>	0 to 99.9 knots.
<b>Log range:</b>	0 to 99999.
<b>Trip reading range:</b>	0 to 999 nautical miles.
<b>Temperature reading range:</b>	-10°C to +40°C.
<b>Depth range:</b>	0 to 400 feet.
<b>Shallow depth alarm:</b>	0 to 29 feet.
<b>Deep depth alarm:</b>	30 to 400 feet.
<b>Shallow anchor alarm:</b>	1 to 250 feet.
<b>Deep anchor alarm:</b>	10 to 400 feet.
<b>Approvals:</b>	
<b>CE - conforms to</b>	89/336/EC(EMC), EN60945. 94/25/EC(RCD), EN28846 (applies to transducer only).



# Glossary

<b>Cal factor</b>	Calibration factor. Used in the ST40 Speed and Bidata instruments to ensure the current speed reading is the actual speed. Values are from 0.25 (reduce speed reading) to 2.5 (increase speed reading).
<b>EMC</b>	Electromagnetic Compatibility.
<b>FA</b>	Fathoms.
<b>FT</b>	Feet.
<b>KEEL</b>	When displayed on the <b>Offset</b> screen (during normal operation), or the <b>Depth offset</b> screen (during User calibration), indicates that a negative depth offset is set.
<b>KPH</b>	Kilometres per hour.
<b>KTS</b>	Knots.
<b>M</b>	Metres.
<b>MPH</b>	Miles per hour.
<b>OFST</b>	When displayed on the <b>Offset</b> screen (during normal operation), or the <b>Depth offset</b> screen (during User calibration), indicates that a depth offset value of 0 is set.
<b>Response</b>	The rate at which an instrument responds to changes in speed and depth. Values are from 1 (slow response) to 15 (fast response).
<b>SeaTalk</b>	SeaTalk is a proprietary Raymarine system which links different compatible products, to provide a single, integrated navigational system. SeaTalk can also communicate with non-SeaTalk equipment using the internationally- accepted National Marine Electronics Association (NMEA) protocol. Contact your Raymarine dealer for details.
<b>W/L</b>	When displayed on the <b>Offset</b> screen (during normal operation), or the <b>Depth offset</b> screen (during User calibration), indicates that a positive depth offset is set.



# Index

## A

- Alarms 7–8
  - enable/disable 8
  - indications 7
  - ranges 35
  - setting thresholds 4–5
  - silencing 2
  - switching on and off 4–5
- Average speed reset 2, 3

## B

- Backlighting 6
- Boat show mode 32

## C

- Calibration 27–33
  - Dealer 32–33
  - Intermediate 31–32
  - setting appropriate response values 27
  - setting user access 33
  - User 27–31
  - User calibration screen sequences 31
- Calibration requirement 1, 26
- Cleaning the instrument 10
- Condensation 9
- Connecting the instrument 21
- Contrast 6
- Current consumption 35

## D

- Dealer calibration 32–33
- Depth
  - alarms 4–5
  - appropriate response values 27
  - offset 5, 28, 30, 31
  - range 35
  - reading flashing 11
  - response 27, 29
  - units 27
- Desktop Mounting Bracket 25–26
- Dimensions 35

- Display
  - backlighting 6
  - contrast 6
  - selecting speed or data display 2

## E

- EMC
  - conformance i, 27
  - installation guidelines 15–16

## F

- Factory defaults 32
- Fault finding 10
  - assistance 13
  - blank display 11
  - depth reading flashing 11
  - low battery 10
  - no depth information 11
  - no speed information 12
  - no speed or temperature information 12
  - SeaTalk problems 13

## I

- Installation 15–26
  - connecting the instrument 21
  - EMC guidelines 15
  - fitting the instrument 23–26
  - planning 15–19
  - site requirements 17–20
  - tools required 16–17
  - transducers 20
- Instrument
  - cleaning 10
  - condensation 9
  - connecting 21
  - current consumption 35
  - fitting 23–26
  - site requirements 19
  - status (master or repeater) 31
  - supply voltage 35
- Intermediate calibration 31–32

**L**

- Log
  - range 35
- Log distance 2
- Low battery indication 10

**M**

- Maintenance 9–10
- Maximum speed reset 2, 3
- Minimum depth reset 2, 4

**N**

- Normal operation 3–6

**O**

- Offset 5, 28, 30, 31
- Operation 1–8

**P**

- Panel lighting 6
- Parts supplied vi

**R**

- Reset
  - average speed 2, 3
  - maximum speed 2, 3
  - minimum depth 2, 4
  - trip distance 3
- Response values
  - depth 27
  - speed 27

**S**

- Servicing and safety 9
- Setting
  - alarm thresholds 4–5
  - backlighting 6
  - calibration factor 30
  - contrast 6
  - correct speed 30
  - depth offset 30–31
  - depth response 29
  - depth units 29
  - shallow alarm lock 29
  - speed response 29
  - speed units 29
- Shallow alarm lock 29

- Site requirements 17–20
  - instrument 19
  - transducers 17–20
- Software version 31
- Specifications 35
- Speed
  - appropriate response values 27
  - calibration factor 37
  - range 35
  - response 27
  - units 29

**T**


- Temperature reading range 35
- Transducers
  - fitting 20
  - site requirements 17–20
- Trip distance
  - range 35
- Trip distance reset 3

**U**

- User calibration 27–31
  - screen sequences 31

**V**

- Voltage 35

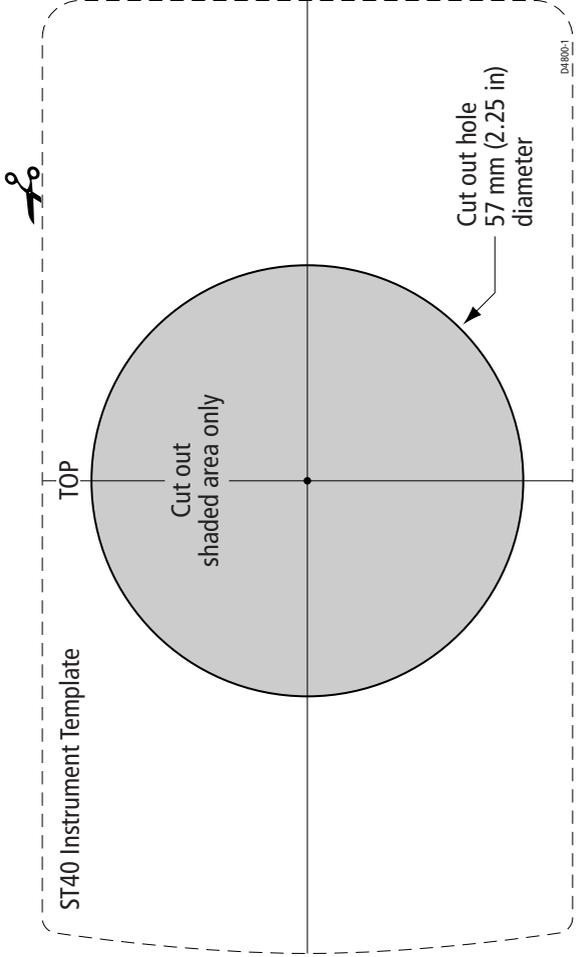



# Limited Warranty Certificate

Raymarine warrants each new Light Marine/Dealer Distributor Product to be of good materials and workmanship, and will repair or exchange any parts proven to be defective in material and workmanship under normal use for a period of 2 years/24 months from date of sale to end user, except as provided below.

Defects will be corrected by Raymarine or an authorized Raymarine dealer. Raymarine will, except as provided below, accept labor cost for a period of 2 years/24 months from the date of sale to end user. During this period, except for certain products, travel costs (auto mileage and tolls) up to 100 round trip highway miles (160 kilometres) and travel time of 2 hours, will be assumed by Raymarine only on products where proof of installation or commission by authorized service agents, can be shown.

## Warranty Limitations

Raymarine Warranty policy does not apply to equipment which has been subjected to accident, abuse or misuse, shipping damage, alterations, corrosion, incorrect and/or non-authorized service, or equipment on which the serial number has been altered, mutilated or removed.

Except where Raymarine or its authorized dealer has performed the installation, it assumes no responsibility for damage incurred during installation.

This Warranty does not cover routine system checkouts or alignment/calibration, unless required by replacement of part(s) in the area being aligned.

A suitable proof of purchase, showing date, place, and serial number must be made available to Raymarine or authorized service agent at the time of request for Warranty service.

Consumable items, (such as: Chart paper, lamps, fuses, batteries, styli, stylus/drive belts, radar mixer crystals/diodes, snap-in impeller carriers, impellers, impeller bearings, and impeller shaft) are specifically excluded from this Warranty.

Magnetrons, Cathode Ray Tubes (CRT), TFT Liquid Crystal Displays (LCD) and cold cathode fluorescent lamps (CCFL), hailer horns and transducers are warranted for 1 year/12 months from date of sale. These items must be returned to a Raymarine facility.

All costs associated with transducer replacement, other than the cost of the transducer itself, are specifically excluded from this Warranty.

Overtime premium labor portion of services outside of normal working hours is not covered by this Warranty.

Travel cost allowance on certain products with a suggested retail price below \$2500.00 is not authorized. When/or if repairs are necessary, these products must be forwarded to a Raymarine facility or an authorized dealer at owner's expense will be returned via surface carrier at no cost to the owner.

Travel costs other than auto mileage, tolls and two (2) hours travel time, are specifically excluded on all products. Travel costs which are excluded from the coverage of this Warranty include but are not limited to: taxi, launch fees, aircraft rental, subsistence, customs, shipping and communication charges etc. Travel costs, mileage and time, in excess to that allowed must have prior approval in writing.

**TO THE EXTENT CONSISTENT WITH STATE AND FEDERAL LAW:**

**(1) THIS WARRANTY IS STRICTLY LIMITED TO THE TERMS INDICATED HEREIN, AND NO OTHER WARRANTIES OR REMEDIES SHALL BE BINDING ON RAYMARINE INCLUDING WITHOUT LIMITATION ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

**(2) Raymarine shall not be liable for any incidental, consequential or special (including punitive or multiple) damages.**

All Raymarine products sold or provided hereunder are merely aids to navigation. It is the responsibility of the user to exercise discretion and proper navigational skill independent of any Raymarine equipment.

# Raymarine

## Factory Service Centers

### United States of America

Raymarine Inc  
22 Cotton Road, Unit D  
Nashua, NH 03063-4219, USA

Telephone: +1 603 881 5200  
Fax: +1 603 864 4756  
www.raymarine.com

### Sales & Order Services

Telephone: +1 800 539 5539 Ext. 2333 or  
+1 603 881 5200 Ext. 2333

### Technical Support

Telephone: +1 800 539 5539 Ext. 2444 or  
+1 603 881 5200 Ext. 2444  
Email: techsupport@raymarine.com

### Product Repair Center

Telephone: +1 800 539 5539 Ext. 2118

### UK, Europe, Middle East, Far East

Raymarine Ltd  
Anchorage Park, Portsmouth  
PO3 5TD, England

Telephone: +44 (0)23 9269 3611  
Fax: +44 (0)23 9269 4642  
www.raymarine.com

### Customer Support

Telephone: +44 (0)23 9271 4713  
Fax: +44 (0)23 9266 1228

Email: techsupport@raymarine.com

Stick barcode label here

Purchased from

Purchase date

Dealer address

Installed by

Installation date

Commissioned by

Commissioning date

Owner's name

Mailing address

This portion should be completed and retained by the owner.